


# Modell 3200



**GEO**® Duschwände  
Spiegelschränke  
Acryl- Tassen u. Wannen  
... auf Dauer besser

**D Bauteile**      **GB Construction elements**      **F éléments de construction**

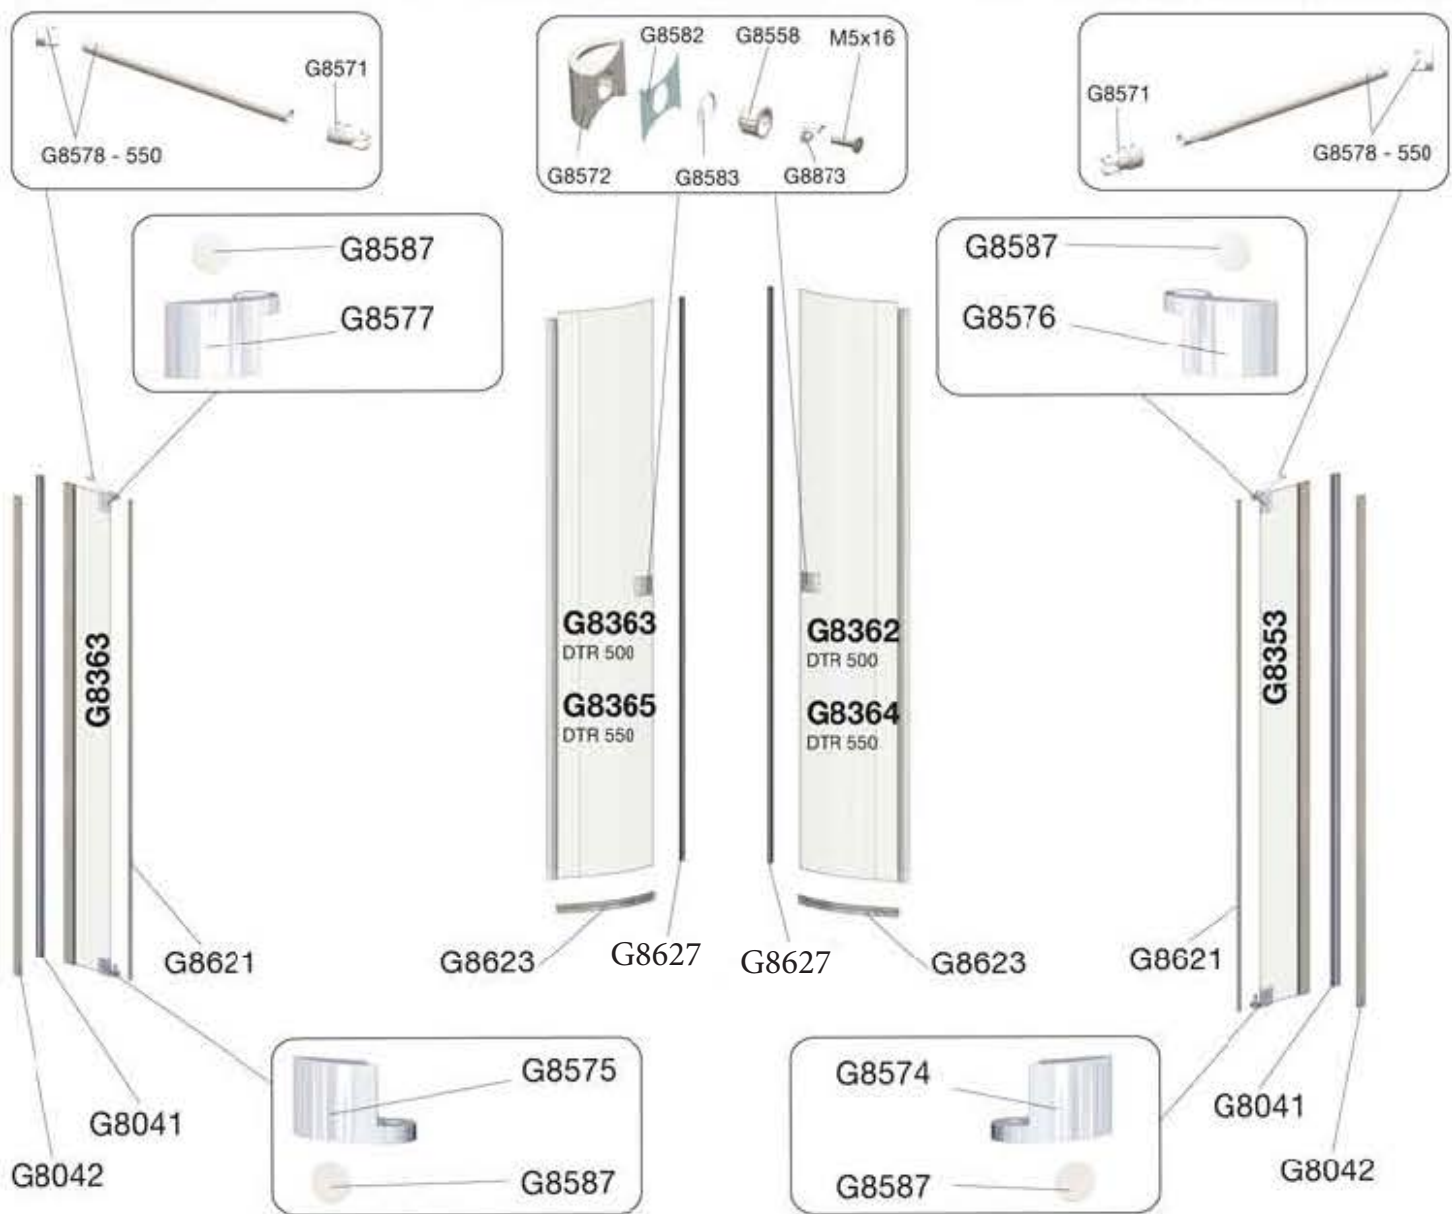

# Modell 3200

**Achtung!** Gläser niemals ungeschützt auf den Boden stellen. Verletzung der Glaskante führt zu Glasbruch.  
**Caution!** Never put glass walls on the floor without protection. Damaging the glass edges results in breaking of the glass.  
**Attention!** Jamais placer des parois de douche en verre au sol sans protection. Des verres endommagés casseront.

**GEO**® Duschwände  
Spiegelschränke  
Acryl- Tassen u. Wannen  
... auf Dauer besser

Zum Aufbau benötigen Sie  
for mounting you need  
pour l'installation il vous faut



Modell 3200 komplett März 2014neu/1sk



Mitgeliefertes Montagematerial  
supplied assembly material  
matériaux pour assemblage





**1**

Modell	Duschtrassen-Einbaumaß Shower tray installation dimension Dimensions de montage bacs de douche (mm)	Bodengleicher Einbau Ground level installation Pose au sol d1 (mm)
800	785-805	755-775
900	885-905	855-875
1000	985-1005	955-975

Technical drawing showing dimensions: 36, 22, 16.5, 25, 8.5, 6, 30. A warning icon indicates a 4 x 50 mm hole is required.

**3**

Diagrams labeled D, E, F, G, H, I, A, B, C showing the installation of door handles and the final assembly of the shower enclosure. A 45-degree angle is specified for the door handle installation.

**2**

Diagrams showing the installation of G8501 (Ø22) and G8852 components. Dimensions of 600 mm are indicated. A detailed view of G8852 shows dimensions: 33 mm, 110 mm, and 3 mm.

**4**

Diagrams showing the final adjustments and door alignment. Dimensions include min. 12 mm, min. 50 mm, Ø 3 mm, 3,5 x 9,5, min. 150 mm, and 4x35. A diagram of the shower tray shows dimensions: min. 150 mm, 4x35, and OK.